

# FUN SPINNER


DC Version  
Instruction Manual  
Model #7748



 **GOLD MEDAL**<sup>®</sup>  
FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA  
[www.gmpopcorn.com](http://www.gmpopcorn.com)

# SAFETY PRECAUTIONS

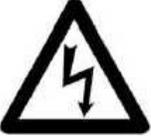	<p style="text-align: center;"><b>⚠ DANGER</b></p> <p>Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water.</p> <p>Always unplug the equipment before cleaning or servicing.</p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>ALWAYS wear safety glasses when servicing this equipment.</p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.</p>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.</p>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.</p>

## NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

# **SPECIFICATIONS**

WIDTH: 14"  
HEIGHT: 12"  
DEPTH: 18"

12 VOLTS DC Power Supply

# **INSTALLATION INSTRUCTIONS**

## **CHECKING SHIPMENT**

Unpack all cartons and check thoroughly for any damage, which may have occurred during transit. Damage claims should be filed immediately with the transportation company.

## **INSTALLATION**

Set the Fun Spinner on a flat level surface. Plug the power supply chord into a standard 115 volt grounded wall receptacle.

	<b>⚠ DANGER</b>
	Machine must be properly grounded to prevent electrical shock to personnel. Always unplug the equipment before cleaning or servicing.

## OPERATING INSTRUCTIONS

### CONTROLS AND THEIR FUNCTIONS

On the rear panel near the power cord is the main power **ON/OFF** switch. A second switch is activated when the lid is in the down position. During normal operation, the main power switch should be in the **ON** position. Opening and closing the lid will start or stop the paper tray spinning. **CAUTION!** - Remember to turn the main power switch to **OFF** before unplugging the machine.

### CREATING ARTWORK


Before turning the main power switch **ON**, place one of the corrugated liners, **item #7737** (not included), around the inside of the bowl. This will absorb most of the excess paint and minimize clean up at the end of the day. If paint build-up on the liner becomes excessive, turn the machine power switch to **OFF** and replace the liner.

The artwork may be created in one of two ways.

**First Method:** Place the 5 x 7 card stock, **item #7739** (not included), in the paper tray being sure the edges of the paper are within the tray edges. Squeeze small drops or lines of paint ( see Gold Medal Products for ordering paint) onto the card stock. Multiple colors of paint may be used and are recommended for the best pictures. Close lid of the machine to start the tray spinning. Raise the lid after a few seconds to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

**Second Method:** Place the 5 x 7 card stock, **item #7739** (not included), in the paper tray being sure the edges of the paper are within the tray edges. Close the lid of the machine to start the tray spinning. Squeeze a few drops of paint (see Gold Medal Products for ordering paint) through the slot in the lid onto the card stock. Multiple colors of paint are recommended for the best pictures. Raise the lid to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

**Optional Accessories:** Item **#7745** – Flying Disc Holder  
**#7747** – Fun Spinner Base

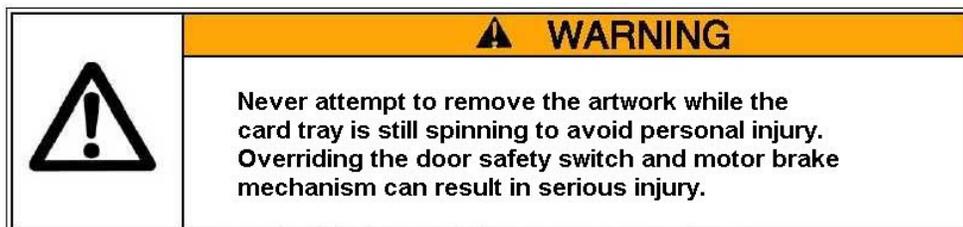

# ACCESSORIES

Item No.	Description
7730	Red Washable Paint - One dozen 8 oz. bottles
7731	Blue Washable Paint -One dozen 8 oz. bottles
7732	Yellow Washable Paint -One dozen 8 oz. bottles
7733	Green Washable Paint -One dozen 8 oz. bottles
7734	Purple Washable Paint -One dozen 8 oz. bottles
7735	Orange Washable Paint -One dozen 8 oz. bottles
7736	Multi-Color Washable Paint -One dozen 8 oz. bottles, 2 of each color
7737	Bowl Liner - bundle of 25
7738	Card Frames - bundle of 100
7739	5" x 7" Card stock - bundle of 100
7740	Conical Bottle Caps - One dozen

# CARE AND CLEANING

Use of the corrugated bowl liner will minimize the amount of cleaning required. Turn the main power switch to the **OFF** position and unplug the Fun Spinner from its power source. Use a clean damp cloth to wipe any paint from the inside of the bowl and from any exterior surfaces.

	 <b>DANGER</b>
	<b>To avoid electrical shock and damage to the motor, never flood the bowl with water to clean.</b>

## MAINTENANCE INSTRUCTIONS

	<b>⚠ DANGER</b>
	<p>Do <b>NOT</b> immerse any part of this equipment in water. Unplug your machine before servicing.</p>

	<b>⚠ WARNING</b>
	<p>Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.</p>

	<b>⚠ CAUTION</b>
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p>

## HOW TO ORDER REPAIR PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include you model name and machine serial number (found on nameplate) with your order.
4. Address orders to:

Parts Department  
 Gold Medal Products Co.  
 10700 Medallion Drive  
 Cincinnati, Ohio 45241-4807


or, place orders at:

(800) 543-0862  
 (513) 769-7676  
 Fax: (513) 769-8500  
 E-mail: [info@gmpopcorn.com](mailto:info@gmpopcorn.com)

## PARTS LIST

<b>Item No.</b>	<b>Part No.</b>	<b>Description</b>
1	12360	SWITCH, DOOR SAFETY
2	52102	POWER SUPPLY TRANSFORMER
3	42532	SWITCH, DPST ROCKER
4	47120	KNOB LID LIFT
5	49138	HINGE, LEFT HAND FEMALE
6	49139	HINGE, RIGHT HAND FEMALE
7	49140	HINGE, RIGHT HAND MALE
8	49141	HINGE, LEFT HAND MALE
9	52060	BOWL
10	52101	MOTOR
11	52122	CABINET WELD ASSY
12	52067	CABINET BOTTOM
13	52105	PAPER TRAY WELDMENT
14	52073	DECAL
15	52074	LID
16	52081	SWITCH BRACKET
17	52107	MANUAL
18	87247	RUBBER BUMPER/FOOT
19	52109	POWER JACK ASSEMBLY
20	52097	RELAY

# ELECTRICAL SCHEMATIC.

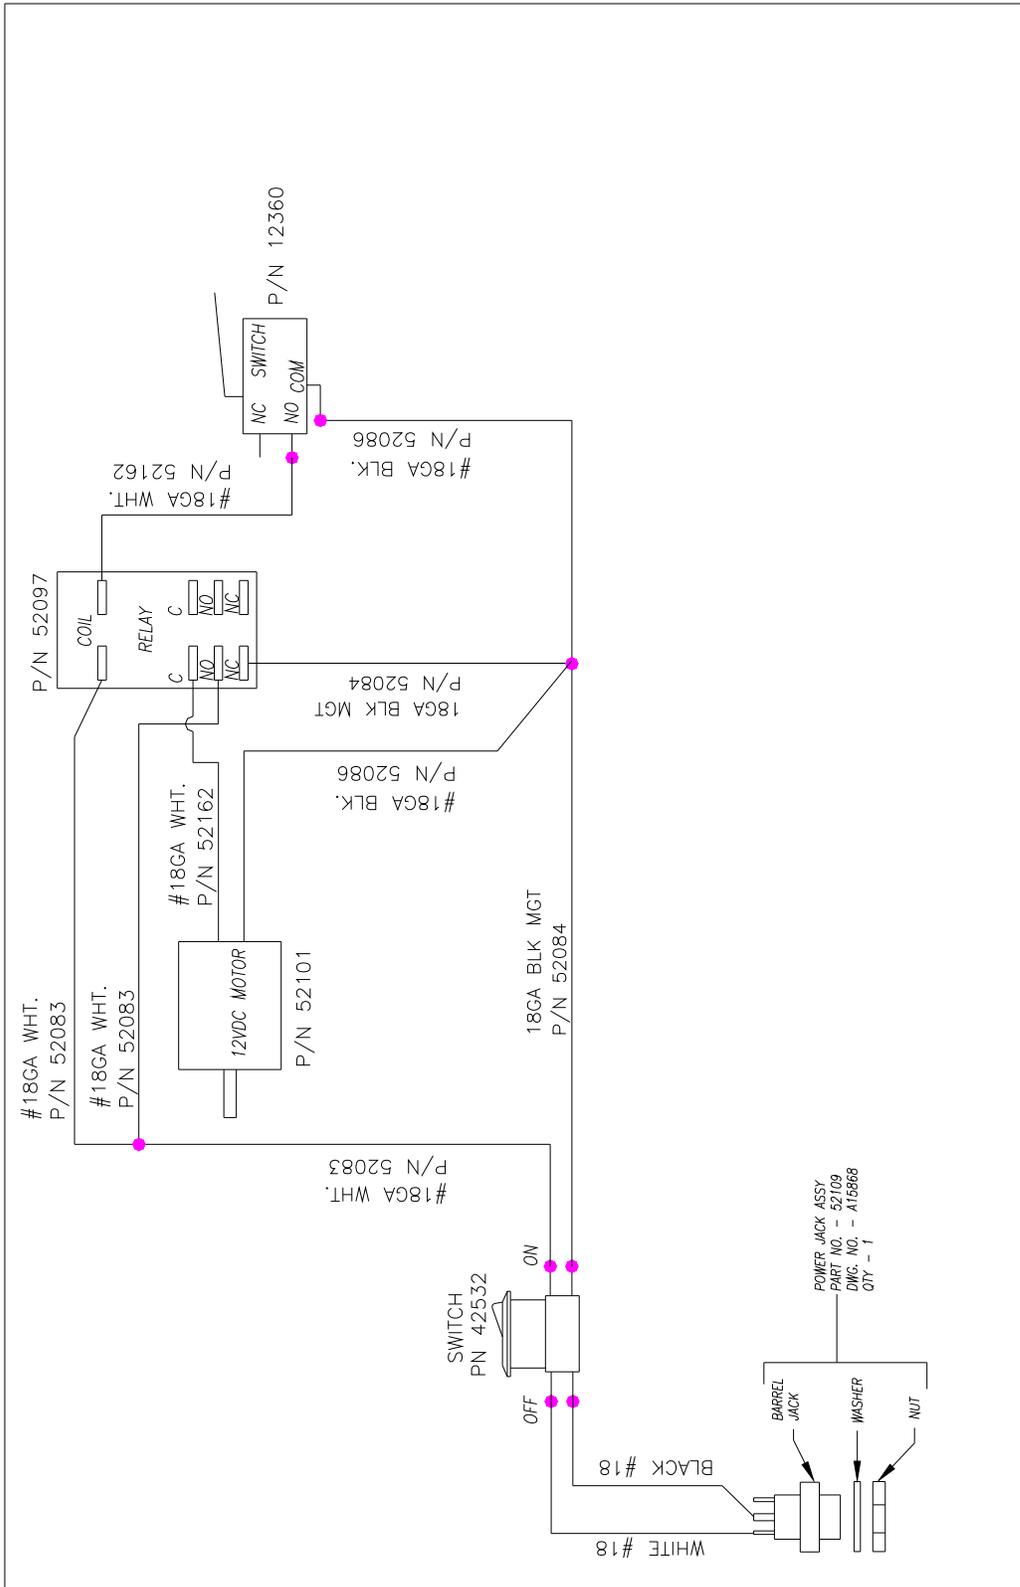

## **WARRANTY**

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

*NOTE: This equipment is manufactured and sold for commercial use only.*



**GOLD MEDAL PRODUCTS COMPANY**  
**10700 Medallion Drive**  
**Cincinnati, Ohio 45241-4807 USA**